


# SCBA Score Board Console

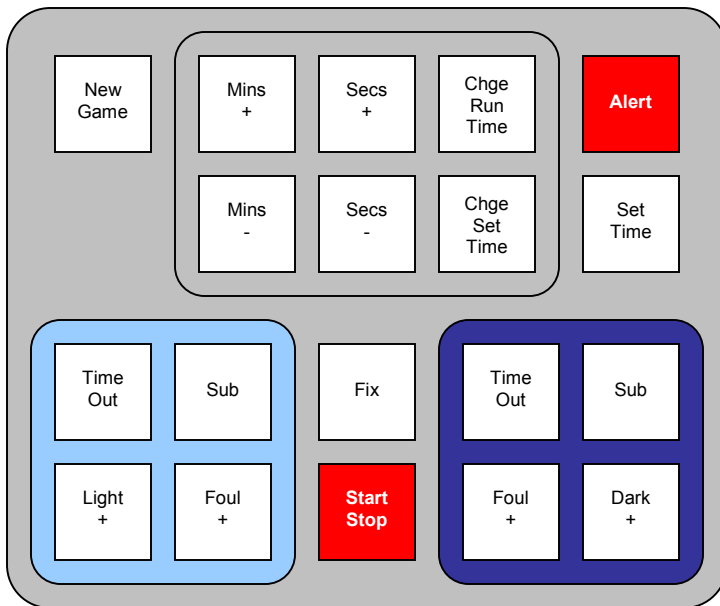

Your console is laid out as pictured.

Clock functions are found at the top. Team functions are found within the two blue areas at the bottom of the touch pad

## **Clock Functions**

- When first turned on at the main switch, the Set Time is automatically 20 minutes, scores are zero and no time outs or subs are showing.
- To change the Set Time: Press the “Change Set Time” button (fourth from the left, 2 down from the top) and then use the “Mins/Secs +” or “Mins/Secs –” buttons found in the centre top region of the console. You will see the clock change on both the console time piece and the score board clock. Please note that each time the clock is reset it will return to this changed set time.
- To change the Run Time: Press the “Change Run Time” button (fourth from the left) and then use the “Mins/Secs +” or “Mins/Secs –” buttons found in the centre top region of the console. You will see the clock change on both the console time piece and the score board clock. Please note that each time the clock is reset it will return to the changed set time not this changed run time.
- Resetting the clock: Press and hold the “Set Time” button. This will take about 5 seconds to change. This will enable you to reset the clock to the set time but not wipe the scores or other showing information.
- Beginning a New Game: Press and hold the “New Game” button. This will take about 5 seconds to change. This will enable you to reset the clock to the set time and wipe the scores or other showing information.
- The “Alert” button will sound the buzzer for your scoreboard.
- The “Start Stop” button will advance the clock.

## **Team Functions**

- Scoring: Use the “Light +” or “Dark +” buttons to add on points. One press will equate to one point. This will be shown on the scoreboard.
- Fouls: Use the “Foul +” buttons to add on a team foul. One press will equate to one foul. This will be shown on the scoreboard.
- Time Out: To indicate that a team wants a time out, press the “Time Out” button.
- Sub: To indicate that a team wants a sub, press the “Sub” button.
- Made a Mistake: Press and hold the “Fix” button whilst pressing the button in question. For instance, if you place one too many points on the light teams tally, press the “Fix button” and the “Light +” button at the same time. The score will change accordingly on the score board.